

BEDIENUNGSANLEITUNG (INSTRUCTION MANUAL)



I. INTRODUCTION

This instrument is a digital thermometer for use with any K-type thermocouple as temperature sensor.

Temperature indication follows National Bureau of Standards and IEC584 temperature/voltage table for K-type thermocouples.

II. OPERATION INSTRUCTIONS

§ Power-Up

Press the (1) key to turn the thermometer ON or OFF.

§ Connection the Thermocouples

For measurement, plug the thermocouple into the input connectors.

§ Selecting the Temperature Scale

When the meter was first powered on, the default scale setting is set at Celsius (°C) scale. The user may change it to Fahrenheit (°F) by pressing “°C/°F” button and vice versa to Celsius.

§ Data-Hold Operation

The user may hold the present reading and keep it on the display by pressing the “**HOLD**” button. When the held data is no longer needed, one may release the data-hold operation by pressing “**HOLD**” button again. When the meter is under Data Hold operation, the “**r REL**”,  and “°C/°F” button are disabled.

§ T1, T2, T1-T2 Display Control

One may select T1, T2 or T1-T2 to show on the main display by pressing  button. When T1 or T2 is select to show on the main display, the other temperature will be shown on the second display. When one select T1-T2 to show on the main display, T1 and T2 will be shown on the second display alternately.

§ Relative Operation for Main Display

When one press the “ r REL ” button, the meter will memorize the present reading and the difference between the new reading and the memorized data will be shown on the display. Press the “ r REL ” button again to exit the Relative operation.

§ MAX/MIN/AVG Operation for Main Display

When pressing the "MAX/MIN" button the meter will enter the MAX/MIN mode. Under this mode the maximum value, minimum value is kept in the memory simultaneously and updated with every new sample of data. When the MAX symbol is display, the Maximum is shown on the display.

Press "MAX/MIN" again, then the MIN symbol is on the display and also the minimum reading.

Press "MAX/MIN" again, MAX, and MIN will blink together. This means that all these data is updated in the memory and the reading is the present temperature.

One may press "MAX/MIN" to circulate the display mode among these options.

When the meter is under "MAX MIN" operation and “ °C/°F ” button are disabled (when you press “ °C/°F ” button in "MAX MIN" mode, there will be two continuous beep).

To exit the MAX/MIN mode, one may press and hold "MAX/MIN" for two seconds.

§ Auto Power Off

By default, when the meter is powered on, it is under auto power off mode. The meter will power itself off after 30 minutes if no key operation and no RS232 communication combination at power on can disable auto power off.

One may press and hold “HOLD” button and then power on the meter and there will be two successive beeps to indicate that auto power off is disabled and the  will not show up.

§ Low Battery Condition

When the battery voltage is under proper operation requirement, the  Symbol will be shown on the LCD and the battery needs to be replayed with new one.

§ Calibration Point

Room Temperature $23 \pm 3^{\circ}\text{C}$

input	Adjust VR	tolerance
0 °C	VR1	$\pm 0.1^{\circ}\text{C}$
190 °C	VR2	$\pm 0.1^{\circ}\text{C}$
1000 °C	VR3	$\pm 1^{\circ}\text{C}$
1900 °F	VR4	$\pm 1^{\circ}\text{F}$

Normally, performing offset Calibration with thermal stabled ice water through VR1 will give a very good calibration result.


§ Digital Output

The Digital Output is a 9600bps N 81 serial interface.

The RX is a 5V normal high input port.

The TX is a 5V normal high output port.

The command of Digital Output is list below.

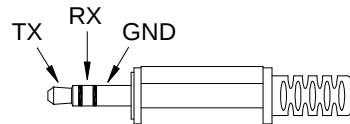

RS232 command	Function	Remarks
K(ASC 4BH)	Ask for model No.	Send 4 bytes
D(ASC 44H)	Ask for main display Range, Data, Unit	Send 22 bytes
B(ASC 42H)	Ask for secondary display Range, Data, Unit	Send 22 bytes
S(ASH 53H)	Ask Status	Send 13 bytes
H(ASC 48H)	Hold button	
T(ASC 54H)	TIMER button	
M(ASC 4DH)	AVG/MAX/MIN button	
N(ASC 4EH)	Exit AVG/MAX/MIN mode	
R(ASC 52H)	REL button	
C(ASC 43H)	C/F button	
A(ASC 41H)	Inquire all encoded data	Send encoded 8 byte

§ Command K:

Return 4 bytes. For example, when sends command “K” to meter, it will return “3”, “0”, “1”, ASCII (13).

§ Command D:

Return data of main window.

Range: T1, T2, T1-T2 (7 bytes), the unused characters is left as space ASC (13).

Data: ± 9999.9 – OL, OL (7 bytes include polarity and decimal point)

Unit: C, F (5 bytes)

When the meter receive the “D” command, it will send:
Range, Data, Unit (where represent space (ASC (20H))

For example:

T1 ... -199.9 .. C ...

(0x13) represent T1, - 199.9°C

The total byte number should be 7+1+7+1+5+chr(13) = 22 Bytes

§ **Command B:**

Return the contents in the second display.

§ **Command S:**

Return the operation mode HOLD, MAX, REL, if the mode is not entered, the related characters will be left as space.

For example:

when the meter is under MAX display, the meter will return:

... MAX ...

§ **Command T:**

Equivalent to one pushing on the HOLD button.

§ **Command M:**

Equivalent to one pushing on the HOLD AVG/MAX/MIN button and no message is returned.

§ **Command R:**

Equivalent to one pushing on the REL button and no message is returned.

§ **Command C:**

Equivalent to one pushing on the C/F button and no message is returned.

§ **Command A:**

1st BYTE:

The first byte is the start byte, its value is 2.

2nd BYTE:

bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
C/F	Low Bat	Hold	REL	K/J	MAX/AVG/MIN		

bit 2 bit 1 bit 0

0 0 0 à normal mode

0 0 1 à MAXIMUM mode

0 1 0 à MINIMUM mode

1 0 0 à AVG mode

1 1 1 à calculate MAX/MIN/AVG in back-ground and lcd "MAX", "AVG", "MIN" will flash.

bit3: 1 à 0 à K TYPE 1 à J TYPE

bit4: 1 à REL

bit5: 1 à HOLD 0 à not HOLD

bit6: 1 à LOW BATTERY 0 à BATTERY NORMAL

bit7: 1 à C 0 à F

3nd BYTE:

bit7	Bit6	bit5	bit4	bit3	bit2	bit1	bit0
		point	minus	OL	point	minus	OL

bit0: 1 à main window value is OL, 0 à not OL

bit1: 1 à main window value is minus

0 à main window value is plus

bit2: 1 à 4th byte and 5th byte represent #####

0 à 4th byte and 5th byte represent ###.#

bit3: 1 à sub window value is OL 0 à not OL

bit4: 1 à sub window value is minus

0 à sub window value is plus.

bit5: 1 à 6th byte and 7th byte represent #####

0 à 6th byte and 7th byte represent ###.#

bit7 bit6:

00 à Main window is T1-T2, sub window is T1

01 à Main window is T1-T2, sub window is T2

10 à Main window is T1, sub window is T2

11 à Main window is T2, sub window is T1

4th BYTE: first two BCD code of main window value.


5th BYTE: last two BCD code of main window value

6th BYTE: first two BCD code of sub window value.


7th BYTE: last two BCD code of sub window value.

8th BYTE: The last byte is the end byte , it value is 3, first and last byte are used to check frame error.

III. SYMBOL DEFINITON AND BUTTON LOCATION

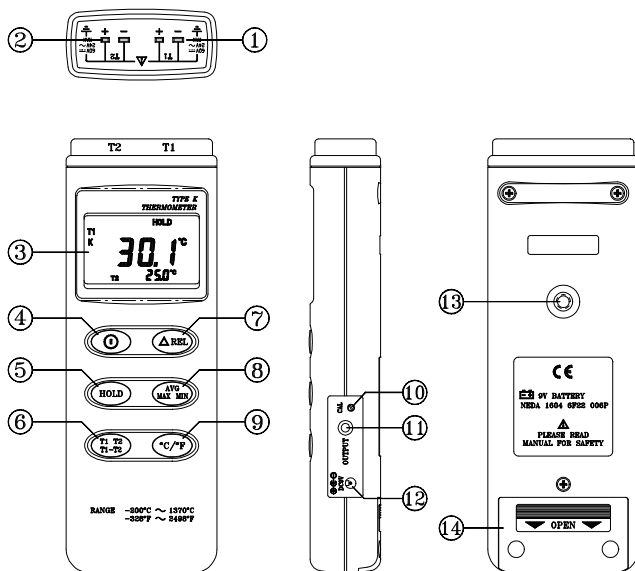

- (1) T1 K type temperature sensor connector
- (2) T2 K type temperature sensor connector
- (3) LCD display

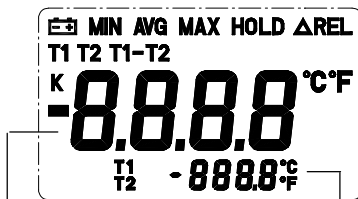

Main Display

Second Display

<u>Symbol</u>	<u>Funktion</u>
	This indicates that the minus temperature is sensed.
°C °F	Centigrade and Fahrenheit indication.
K	Thermocouple Type Indication.
HOLD	This indicates that the display data is being held.
MAX	The Maximum value is now being displayed.
MIN	The Minimum value is now being displayed.
AVG	The Average value is now being displayed.
r REL	The reading is now under relative mode.
	This Battery is not sufficient for proper operation.

- (4) ON/OFF button
- (5) HOLD button
- (6) T1, T2, T1-T2 control button
- (7) Relative readout button
- (8) MAX/MIN function control button
- (9) °C, °F control button
- (10) Offset calibration screw
- (11) Digital output connector
- (12) AC power adapter connector
- (13) Tripod connector
- (14) Battery cabinet cover

IV. SPECIFICATIONS

Numerical Display:	4 digital liquid crystal display
Measurement Range:	-200°C ~ 1370°C -328°F ~ 2498°F
Resolution	-200°C ~ 200°C 0.1°C; 200°C ~ 1370°C 1°C -200°F ~ 200°F 0.1°F; else 1°F
Maximum Voltage at	
Thermocouple Input:	60V DC, or 24Vrms AC
Operation temperature:	0°C ~ 50°C (32°F ~ 122°F)
Operation humidity:	0 ~ 80% RH
Storage temperature:	-10°C to 60°C (14°F ~ 140°F)
Storage humidity:	0 ~ 80% RH
Sample Rate:	0.6 times per second
Dimension:	184 x 64 x 30mm
Weight:	210g Approx. (7.4oz)
Accessory:	K Type Bead Probe, Battery, Carrying Instruction Menu, Software program, Connection Cable
Case, I RS-232	
Power requirement:	9 Volt Battery, NEDA 1604 or JIS 006P or IEC6F22
Battery Life:	Approx. 100hrs with alkaline battery
AC Adapter:	9VDC ± 15% 100mA
Plug Diameter:	3.5mm x 135mm
Option:	AC Adapter
Temperature	
Coefficient:	For ambient temperatures from 0°C ~ 18°C and 28°C ~ 50°C, for each °C ambient below 18°C or above 28°C and the following tolerance into the accuracy spec. 0.01% of reading + 0.03°C (0.01% of reading + 0.06°F)

Accuracy: at ($23 \pm 5^{\circ}\text{C}$)

Range	Accuracy
$-200^{\circ}\text{C} \sim 200^{\circ}\text{C}$	$\pm(0.3\% \text{ reading} + 1^{\circ}\text{C})$
$200^{\circ}\text{C} \sim 400^{\circ}\text{C}$	$\pm(0.5\% \text{ reading} + 1^{\circ}\text{C})$
$400^{\circ}\text{C} \sim 1370^{\circ}\text{C}$	$\pm(0.3\% \text{ reading} + 1^{\circ}\text{C})$
$-328^{\circ}\text{F} \sim -400^{\circ}\text{F}$	$\pm(0.5\% \text{ reading} + 2^{\circ}\text{F})$
$-200^{\circ}\text{F} \sim 200^{\circ}\text{F}$	$\pm(0.3\% \text{ reading} + 2^{\circ}\text{F})$
$200^{\circ}\text{F} \sim 400^{\circ}\text{F}$	$\pm(0.5\% \text{ reading} + 2^{\circ}\text{F})$
$400^{\circ}\text{F} \sim 2498^{\circ}\text{F}$	$\pm(0.3\% \text{ reading} + 2^{\circ}\text{F})$

For T1-T2 Measurement, the accuracy is
 $\pm(0.5\% \text{ T1-T2 reading} + 2^{\circ}\text{C})$ or
 $\pm(0.5\% \text{ T1-T2 reading} + 2^{\circ}\text{F})$



Note:

The basic accuracy Specification does not include the error of the probe. Please refer to the probe accuracy specification for additional details.